


CASTICO®

TOUCH-UP KIT

This touch-up kit is used to fix minor damages such as scratches affecting clear coat and color paint layers and small surface no larger than 3/8" by 3/8". If your product has more significant damage, please contact CASTICO Customer Care for assistance at: Contact@Castico-TX.com or (844) 364-2502

IMPORTANT: Carefully read instructions before application. If you have any questions or concerns, please reach out to our customer care team at (844) 364-2502.

Inside this kit.

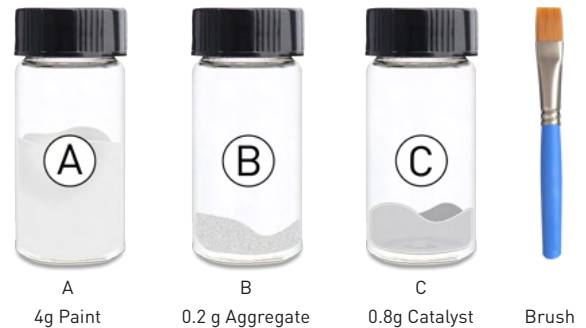

Required are not included.

Filler (Bondo) - Rotary Tool (Dremel) - Sandpaper - Masking or Painter's Tape - Alcohol

APPLICATION INSTRUCTIONS



1 Remove broken or loose pieces from damage area.



2 Using the rotary tool, carve the area making a uniform indentation. Clean the area with alcohol.



3 Apply tape keeping a clearance of 1/16" offset from the repair area.



4 Apply Bondo* on the damaged area. Leave enough material to be able to shape the area. Remove the tape before curing.



5 Leave enough bondo* to be able to shape the area.



6 Sand excess bondo* following the shape of the area. Clean the area with alcohol before proceeding with paint.



7 Pour Paint (A) & Texture (B) into Catalyst (C). Close Catalyst bottle (C) and shake for one minute to mix contents.



8 Paint must be applied within 10 minutes of mixing. Allow paint to dry for a minimum of 6 hours, before use.



9 Note: Due to difference in filler materials and paint application methods, color variation to the repair area may occur.

CASTICO®

For questions & assistance:

contact@castico-tx.com

+1 (956) 375 2302

1704 Haggard St, Weslaco, TX 78596